



HEAT ON TRANSFERLOGO MANUAL


LP274/277

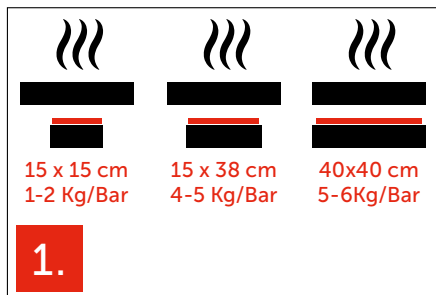


Recommended pressure for LOXY transfers.

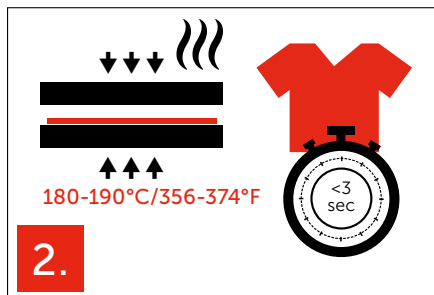


Pre-heat the fabric up to 3 seconds to remove residues, impurity and reduce shrinkage.

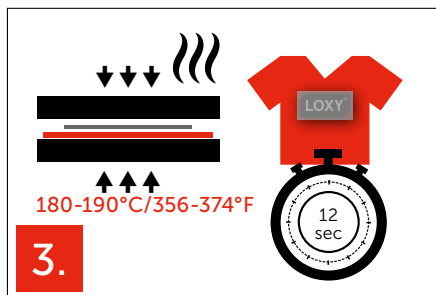


Apply the transfer, with the film facing upwards.

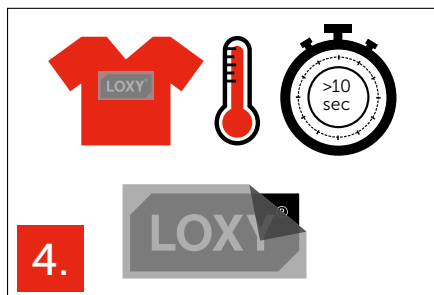

Wait minimum 10 seconds before removing the film. Some fabrics require full cooldown.

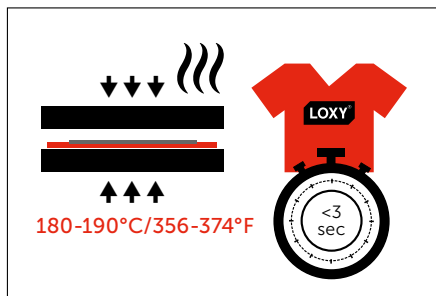

Some fabrics may require additional press. Use backside of the folie over the transfer.

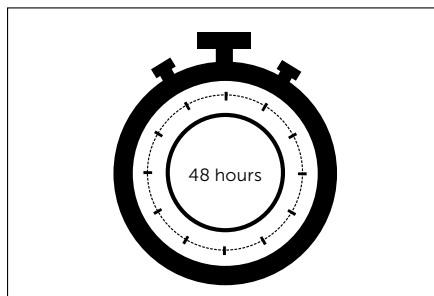

The print has to rest 48 hours before starting washing procedure.

The above general recommended applications parameters must be tested and internally verified for different fabrics and applications. Some fabrics may require additional or deviating procedures.

PRINTED IN NORWAY

2021-08

LOXY® Print